ENGLISH

DVD Camcorder

VP-DC171(i)/DC171Bi/DC171W(i)/DC171WB/DC172W/ DC173(i)/DC175WB/DC175W(i)/DC575WB/DC575Wi

AF Auto Focus
CCD Charge Coupled Device
LCD Liquid Crystal Display

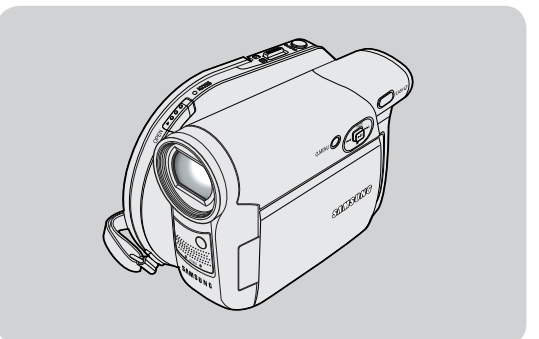

Owner's Instruction Book
Before operating the unit, please read this Instruction Book thoroughly, and retain it for future reference.

SAMSUNG

Use only approved battery packs.
Otherwise, there is a danger of overheating, fire or explosion.
Samsung is not responsible for problems occurring due to using unapproved batteries.

DVD R/RW DVD+ReWritable DVD+R DL

AD68-01230G

Contents

Contents

Notes and Safety Instructions 6

Notes regarding the Rotation of the LCD Screen 6
Notes regarding the LCD Screen, Viewfinder, Lens 6
Notes regarding Disc Cleaning and Handling 7
Notes regarding DVD Camcorder 8
Notices regarding Copyright (VP-DC171i/DC171Bi/DC171Wi/ DC173i/DC175Wi/DC575Wi only) 8
Servicing & Replacement Parts 8

Getting to Know Your DVD Camcorder 9

Features 9
Learning available Discs and Their Features 10
How to use the DVD Camcorder easily 12
Accessories Supplied with the DVD Camcorder 13
- Basic Accessories 13
- Optional Accessories 13

Front & Left View 14
Left Side View 15
Right & Top View 16
Rear & Bottom View 17
- Usable Memory Cards (2GB Max) (VP-DC173(i)/ DC175WB/DC175W(i)/DC575WB/DC575Wi only) 17

Remote Control (VP-DC172W/DC173(i)/DC175WB/ DC175W(i)/DC575WB/DC575Wi only) 18

Preparation 19

Using the Hand Strap & Lens Cover 19
- Hand Strap 19
- Lens Cover 19
- Installing the Lens Cover after Operation 19

Lithium Battery Installation 20
- Lithium Battery Installation for the Internal Clock 20
- Installing the Lithium Battery in the Remote Control (VP-DC172W/DC173(i)/DC175WB/DC175W(i)/DC575WB/ DC575Wi only) 20
- Precautions regarding the Lithium Battery 20

Using the Lithium Ion Battery Pack 21
- Charging the Lithium Ion Battery Pack 21
- Charging, Recording Times based on Battery Type 22
- Battery Level Display 23
- Battery Pack Management 23
- Maintaining the Battery Pack 24

Connecting a Power Source 25
- Using a Household Power Source 25

About the Operating Modes 26
Using the Joystick 26
Using the Q.MENU 27
OSD (On Screen Display) in Camera Mode/Player Mode .28
OSD (On Screen Display) in M.Cam Mode/M.Player Mode .. 29
(VP-DC173(i)/DC175WB/DC175W(i)/DC575WB/DC575Wi only) 29
Turning the OSD (On Screen Display) On/Off 29
- Turning OSD On/Off 29
- Turning the Date/Time On/Off 29

Contents

Initial Setting : System Menu Setting 30

Setting the Clock (Clock Set) 30
Setting the Wireless Remote Control Acceptance (Remote) . 31
(VP-DC172W/DC173(i)/DC175WB/DC175W(i)/DC575WB/DC575Wi only) 31
Setting the Beep Sound (Beep Sound) 32
Setting the Shutter Sound (Shutter Sound) 33
(VP-DC173(i)/DC175WB/DC175W(i)/DC575WB/DC575Wi only)..... 33
Selecting the OSD Language (Language) 34
Viewing the Demonstration (Demonstration)..... 35

Initial Setting : Display Menu Setting 36

Adjusting the LCD Screen (LCD Bright/LCD Colour) 36
Displaying the Date/Time (Date/Time)..... 37
Setting the TV Display (TV Display) 38

DVD Camcorder: Before Recording 39

Using the Viewfinder..... 39
  Adjusting the Focus 39
Using the LCD ENHANCER..... 39
Various Recording Techniques 40
Inserting and Removing a Disc 41
Selecting the Record Mode (Rec Mode) 43

DVD Camcorder: Basic Recording 44

Making your First Recording 44
Recording with Ease for Beginners (EASY.Q Mode)..... 45
Zooming In and Out..... 46
Using the Fade In and Out (FADE) 47
  To Start Recording 47
  To Stop Recording 47
Using Back Light Compensation Mode (BLC)..... 48
Using the Colour Nite 49
Using the LIGHT (VP-DC175WB/DC175W(i)/DC575WB/DC575Wi only) 50

DVD Camcorder: Advanced Recording..... 51

Cutting Off Wind Noise (Wind Cut)..... 51
Setting the Shutter Speed & Exposure (Shutter/Exposure) 52
  Recommended Shutter Speeds When Recording..... 52
  Adjusting the Exposure When Recording 52
Auto Focus / Manual Focus..... 53
  Auto Focus..... 53
  Manual Focus 53
Programmed Automatic Exposure Modes (Program AE) ... 54
  Setting the Program AE 55
Setting the White Balance (White Balance) 56
  Setting the Custom White Balance 57
Applying Digital Effects (Digital Effect) 58
  Selecting the Digital Effects 59
Setting the 16:9 Wide mode (16:9 Wide) 60
Setting the Digital Image Stabilizer (DIS) 61
Zooming In and Out with Digital Zoom (Digital Zoom) 62
  Selecting the Digital Zoom..... 62

Contents

DVD Camcorder: Thumbnail index and Playlist63

What is the Thumbnail Index? 63
What's a Playlist? **DVD-RW(VR mode)** 63

DVD Camcorder 64

Playing Title Scenes **DVD-RW/+RW/-R/+R DL** 64
Adjusting the Volume **DVD-RW/+RW/-R/+R DL** 64
Various Functions while in Player Mode **DVD-RW/+RW/-R/+R DL** 65
- Playback/Still 65
- Skip Playback (Forward/Reverse) 65
- Picture Search (Forward/Reverse) 66
- Slow Playback (Forward/Reverse) (VP-DC172W/ DC173(i)/DC175WB/DC175W(i)/DC575WB/DC575Wi only) 66

Deleting a Title Scene (Delete) **DVD -RW/+RW** 67
Deleting a Section of a Title Scene (Partial Delete) **DVD-RW(VR mode)** 68

DVD Camcorder: Playlist 69

Creating a New Playlist (New Playlist) **DVD-RW(VR mode)** 69
Playing the Playlist **DVD-RW(VR mode)** 70
Deleting a Playlist (Delete) **DVD-RW(VR mode)** 71
Adding Scenes to Playlist (Scene-Add) **DVD-RW(VR mode)** 72
Changing the Order of Scene Playing within a Playlist (Scene-Move) **DVD-RW(VR mode)** 73
Deleting Scenes from Playlist (Scene-Delete) **DVD-RW(VR mode)** 74
Deleting a Section of a Playlist (Scene-Partial Delete) **DVD-RW(VR mode)** 75

DVD Camcorder: Disc Manager 77

Disc Information (Disc Info) **DVD-RW/+RW/-R/+R DL** 77
Editing the Disc Name (Disc Info-Rename) **DVD-RW/+RW/-R/+R DL** 78
Formatting a Disc (Disc Format) **DVD-RW/+RW** 79
Finalising a Disc (Disc Finalise) **DVD-RW/-R/+R DL** 80
Playing Back on a PC with DVD drive 81
Playing back a finalised disc on a DVD Player/Recorder ..81
Unfinalising a Disc (Disc Unfinalise) **DVD-RW** 82

DVD Camcorder: Connection 83

Setting the AV In/Out (VP-DC171i/DC171Bi/DC171Wi/ DC175Wi/DC575Wi only) 83
Viewing Recordings on TV 84
Copying a Disc onto a Tape 86
Using the Voice Plus 87
Recording (Copying) a TV Programme or Video Tape onto a Disc (VP-DC171i/DC171Bi/DC171Wi/DC175Wi/DC575Wi only) 88

Digital Still Camera Mode (VP-DC173(i)/

Using a Memory Card (Usable Memory Card) (not supplied) 89

Contents

Memory Card Functions 89
Inserting a Memory Card 89
Ejecting a Memory Card 89
Structure of Folders and Files on the Memory Card 90
Image Format 90
Selecting the Photo Quality (Photo Quality) 91
Select the Photo Quality 91
Number of Images that can be stored on a Memory Card 91
Setting the Photo Size (Photo Size) (VP-DC575WB/DC575Wi only) 92
Setting the File Number (File No.) 93
Taking a Photo Image (JPEG) on a Memory Card 94
Viewing Photo Images (JPEG) 95
Protection from accidental Erasure (Protect) 96
Deleting Photo Images and Moving Images (Delete) 97
Deleting All Images at Once 98
Formatting the Memory Card (Format) 99
Recording Moving Images (MPEG) on a Memory Card ... 100
Saving Moving Images onto a Memory Card 100
Recording time available on a Memory Card 100
Playing the Moving Images (MPEG) on a Memory Card . 101
Recording Still images onto a Memory Card during DVD playback DVD-RW/+RW/-R/+R DL 102
Marking Images for Printing (Print Mark) 103
Removing the Print Mark 104

PictBridge™ (VP-DC173(i)/DC175WB/DC175W(i)/

Printing Your Pictures-Using PictBridge™ 105
Connecting To a Printer (USB Connect) 105
Setting the Number of Prints 106
Setting the Date/Time Imprint Option 106
Printing Images 106
Canceling the Printing 106

USB Interface (VP-DC173(i)/DC175WB/

Using USB Interface 107
Transferring a Digital Image through a USB Connection .. 107
USB Connection Speed depending on the System 107
System Requirements 107
Selecting the USB Device (USB Connect) 109
Installing DV Media PRO Program 110
Connecting to a PC 112
Disconnecting the USB Cable 112
Using the PC Camera Function 113
Using the USB Streaming Function 114
Using the removable Disk Function 114

Maintenance 115

Using Your DVD Camcorder Abroad 115
Power sources 115
Colour system 115

Troubleshooting 116